



Size: DN 40 to DN 300 Ends: Flanges GN10

**Min Temperature :** - 10°C **Max Temperature :** + 90°C

**Max Pressure:** 10 Bars up to DN150

**Specifications:** Rotating non rising stem and handwheel

Inside screw stem

Brass seat

Materials: Cast iron body

Date: 04/11 Rev.03



### **SPECIFICATIONS:**

- Single wedge disc
- Rotating non rising stem and handwheel
- Inside screw stem
- Graphite packing
- · Brass seat
- Flanges R.F. GN10

#### USE:


- For common fluids
- Min and max Temperature Ts: 10°C to + 90°C
- Max Pressure PN: 10 bars up to DN150 and 6 bars from DN200 to DN300

#### RANGE:

• Cast iron body flanged R.F. GN10 Ref. 150 from DN 40 to DN 300




## **MATERIALS:**

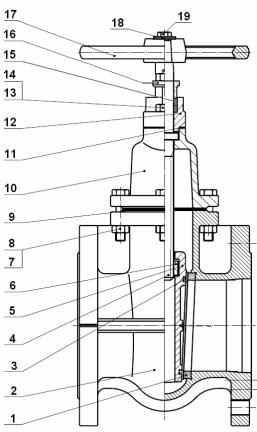

Item	Designation	Materials					
1	Body seat	Brass					
2	Body	Cast iron EN GJL-250					
3	Wedge seat ring	Brass					
4	Stem	SS 420					
5	Wedge disc	Cast iron EN GJL-250					
6	Stem nut	Brass					
7	Bolt	Steel RSt37-2 ( 1.0038 )					
8	Nut	Steel RSt37-2 ( 1.0038 )					
9	Bonnet gasket	Graphite					
10	Bonnet	Cast iron EN GJL-250					
11	Stuffing box gasket	Graphite					
12	Stuffing box	Ductile iron EN GJS-500-7					
13	Bolt	Steel RSt37-2 ( 1.0038 )					
14	Nut	Steel RSt37-2 ( 1.0038 )					
15	Packing	Graphite					
16	Gland follower	Ductile iron EN GJS-500-7					
17	Handwheel	Cast iron EN GJL-250					
18	Washer	Steel RSt37-2 ( 1.0038 )					
19	Bolt	Steel RSt37-2 ( 1.0038 )					



## SIZE ( in mm ):

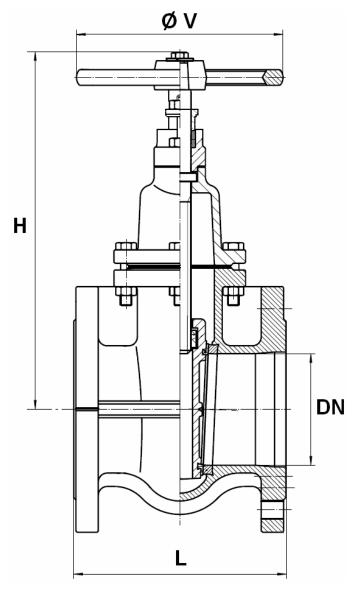

REF.	DN	40	50	65	80	100	125	150	200	250	300
450	L	140	150	170	180	190	200	210	230	250	270
	Н	245	255	277	303	340	387	454	538	629	730
150	øν	130	130	130	150	185	185	195	225	245	285
	Weight (Kg)	9.3	11.2	14	18.8	25	35.5	47	68	139	160



## STANDARDS:

- Fabrication according to ISO 9001 :2000
- DIRECTIVE 97/23/CE: Products excluded from directive (Article 1, § 3.2)
- Length according to EN 558-1 serie 14 (DIN 3202 F4)
- Flanged R.F. according to EN 1092-2 PN10
- Designing according to DIN 3352

**ADVICE**: Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.



## **INSTALLATION INSTRUCTIONS**

#### **GENERAL GUIDELINES:**

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

#### **INSTALLATION INSTRUCTIONS:**

- Before installing the valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will
  not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection, the
  working of the valve and can even cause a rupture. To be sure, place the kit in position to ensure the
  assembling will work.
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.
- Tighten the bolts in cross.
- It's recommended to operate the valve (open and close) 1 to 2 times per year

Date: 04/11 Rev.03